IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER – Any appliance is electrically live, even when the switch is off.

To reduce the risk of death or injury by electric shock:

1. ALWAYS UNPLUG APPLIANCE FROM ELECTRICAL OUTLET IMMEDIATELY AFTER USING (EXCEPT WHEN CHARGING UNIT).

2. Do not place or store appliance where it could fall or be pulled into a tub or sink.

3. Do not use appliance while bathing or in the shower.

4. Do not place appliance in, or drop into, water or other liquid.

5. If appliance has fallen into water, do not reach for it. Unplug immediately.

6. Unplug this appliance before cleaning.

DO NOT REACH INTO THE WATER

WARNING – To reduce the risk of burns, electric shock, fire, or injury to persons:

1. Never leave a plugged-in appliance unattended.

2. This appliance should not be used by, on, or near children or individuals with certain disabilities.

3. Use appliance only for its intended use as described in this manual. Only use attachments recommended by the manufacturer. Do not use an extension cord to operate the appliance.

4. Do not switch the blades when one blade is against the skin trimming the beard. Hold appliance away from face to switch blades.

5. Never operate the appliance if it has a damaged cord or plug, is not working properly, has been dropped or damaged, or dropped into water. Return the appliance to a Conair service center for examination and repair.

6. Keep the appliance cord away from heated surfaces.

7. Do not pull, twist or wrap the cord around the appliance.

8. Never drop or insert any object into any opening of the appliance.

9. Do not place the appliance on any surface while it is operating.

10. Do not use the appliance with a damaged or broken comb or with teeth missing from the blades, as injury may result. Before each use, make certain the blades are aligned properly and oiled.

11. Do not use the appliance outdoors or where aerosol (spray) products are being used or oxygen is being administered.

12. THIS PRODUCT IS FOR HOUSEHOLD USE ONLY.

SAVE THESE INSTRUCTIONS

Precision facial grooming has never been easier than with your new Conair SWITCHCUT™ Complete Facial Grooming System. With a simple slide of the button, switch between the 30mm stainless steel trimmer blade and the 8mm stainless steel detailing blade. This all-purpose trimmer has stainless steel blades for long-lasting cutting precision. The trimmer features turbo power for 15% more cutting power, and a 3-position taper control switch to trim hair at the length you set; the system includes 3 jawline combs, a 10-position adjustable comb for the trimmer blade, a mustache comb, a drawstring accessories pouch to hold all components, a charging stand for the trimmer, lubricating oil, a cleaning brush and shaving foil attachment. The red LED light on the trimmer indicates when the unit is charging.

USER-FRIENDLY SWITCHCUT™ TECHNOLOGY

Your SWITCHCUT™ trimmer incorporates our patent-pending SWITCHCUT™ technology. When you have finished trimming with the 30mm trimmer blade, it is just a simple slide of a button to change from the main trimming blade to the 8mm detailing blade for tight areas and precision detail. This easy motion, which should be done when the trimmer's power is on, disengages the trimmer blade and activates the detailing blade. To change back to the trimmer blade, just simply slide the button back and the detailing blade retracts. The trimmer blade is now ready to use again. Be sure to push the top housing to the front or rear to the outmost position until a 'click' is felt for the selection of Scribe or Trimmer blade function.

NOTE: Before switching between the trimmer and detailing blades, all guide combs must be removed from the unit. For best results when switching between the blades, switch the blades while the power is on and the blades are not against the face.

TROUBLESHOOTING

If your rechargeable trimmer does not seem to be taking a charge, take the following troubleshooting steps before returning it for repair:

1. Be sure the electrical outlet is working by plugging in another appliance to test the outlet.

2. Make sure the electrical plug is not connected to a switch which turns power off when lights are turned off.

3. Be sure you have inserted the trimmer properly into the charging stand, that all connections are secure, and that the trimmer switch is in the "OFF" position.

OPERATING INSTRUCTIONS:

1. Before using your trimmer for the first time, place the unit in the charging stand and charge it for 16 hours. Always place the trimmer in the base with the ON/OFF switch in the OFF position.

2. The trimmer in the charging stand. The switch must face forward for the trimmer to slide properly into the base and fixed firmly.

3. Plug the adaptor into any wall outlet (at the voltage listed on the label affixed to the adaptor). Unplug adaptor when not in use.

4. The adaptor may become warm while charging. This is normal.

5. Battery life can be improved by periodically allowing the trimmer to run until the motor stops. Immediately shut the switch OFF and fully recharge.

USER MAINTENANCE INSTRUCTIONS

TAKING CARE OF YOUR TRIMMER

OILING THE BLADES

About once a month you should oil the trimmer blades with the oil provided in your kit. It is best to do this over a piece of newspaper. Turn the trimmer on and hold it so that the blades are pointed downward. Spread one drop of oil across the blades, then turn the trimmer off and wipe away the excess oil with a soft cloth.
Be careful not to use too much oil and don't oil your trimmer more than necessary, as this could damage the motor. (Never attempt to oil the motor bearing, as it is permanently lubricated.) After oiling the blades, return the trimmer and oil packet to the trimmer storage base. Keep oil away from children.

BLADE CARE

Because the trimmer blades are precision-made for a very special use, they should always be handled with care. Each time you finish using the trimmer, take the cleaning brush provided and brush away any loose hair that has collected in the blades. Then store the trimmer in its recharging storage base to protect the blades until the next use.
Be especially careful when changing or adjusting blades. When you have your trimmer serviced, be sure that both blades are sharpened or replaced at the same time.
To promote the long life of the appliance, use your trimmer only for the purpose intended by the manufacturer – to trim your beard and mustache.

TURBO FEATURE

This product is equipped with a turbo boost button. When activated, this will provide 15% more cutting power. This is especially useful for cutting through thicker hair.

To activate the turbo feature:

1. Turn the Power switch to the "on" position.

2. Press the Turbo button.

3. Continue to press the Turbo button for as long as you need the extra power.

4. Release the Turbo button to return to normal power.

THREE POSITION TAPER CONTROL

The Conair trimmer taper control switch is positioned at the back of the unit. You can hold the trimmer in your hand and adjust the switch as needed. The taper control eliminates the need in some situations for an attachment comb because it lets you gradually adjust the closeness of the cut. For closest cut and shortest hair, push switch all the way to level #3. This is the setting to use for the 2 day shave look. To increase the cutting length, slowly push control down to level #2 or #1 for longer cut. Note that too much clipped hair on the clipper can slow down its operation. To remove it without removing the blades simply use the enclosed cleaning brush and gently sweep away the clipped hair from cutting surfaces. **Note:** The taper control only works with the main 30mm trimmer blade.

GROWING A BEARD AND MUSTACHE

There are three key factors that will determine which beard or mustache style is best for you:
1. The shape and dimensions of your face.
2. The natural growth of your beard/ mustache.
3. The thickness of your beard/mustache. If you are unsure about the type of beard or mustache that would most suit your face, speak with a professional hair stylist and ask for an opinion on what style would be best. Once your beard or mustache has been styled, it is essential that you maintain its appearance. To do this, use your trimmer to trim your beard/mustache weekly.

For the best trimming results, your beard should be slightly damp (NOT WET) when using your trimmer. This will prevent the trimmer from removing more hair than desired.

TYPES OF BEARDS/MUSTACHES

GETTING STARTED:

OUTLINING YOUR BEARD

1. It is always best to begin with a clean, slightly damp beard.
2. After you have combed through your beard in the direction it grows naturally, you will want to outline the desired shape, beginning under your jawline.
3. Begin defining your beard's shape under your chin and work upward on each side of your face toward your ears.
Then define the upper outline of your beard across your cheeks, past your sideburns, and toward your hairline.

NOW YOU'RE READY TO TRIM YOUR BEARD

1. The trimmer includes a 10-position comb for use with the hair trimming blade (2-6.5mm) which provide lengths of 2mm (shortest) to 6.5mm (longest).

2. To use the 10-position comb, slide the unit over the trimmer blades and snap it down into position. At first, until you become familiar with the adjustments, use the longest trim setting. (You can always go back and make your beard a little shorter.)

When using the 10-position comb, turn the wheel at the bottom of the comb counter-clockwise, the setting (1-10) will read the designated trimming length:

1 = 2.0mm	6 = 4.5mm
2 = 2.5mm	7 = 5.0mm
3 = 3.0mm	8 = 5.5mm
4 = 3.5mm	9 = 6.0mm
5 = 4.0mm	10 = 6.5mm

3. Begin trimming your beard using smooth, even strokes. Start with your sideburns and work downward toward your chin. (Never attempt to trim against the natural growth of your beard because the hair will be cut too short.)

4. If you decide you want a closer trim, you can now adjust the 10-position comb attachment to a shorter setting (such as 5.5mm or 6mm) and go over your beard again until you achieve the desired length.

BLENDING THE JAWLINE

1. The three jawline attachments will help you to achieve a neat, finished trim under your chin. To use one of the attachments, press it down over the trimmer blades until it clicks into position.

2. Hold the trimmer in an upright position and begin trimming under your jawline, using short, even strokes.

3. After your beard is blended, turn off the trimmer and remove the attachment by gently pulling up on tab.

TO TRIM YOUR MUSTACHE

1. For best results, start with a clean, slightly damp mustache.

2. Comb through your mustache in the direction it grows.

3. Place the 10-position comb over the facial hair blade and snap it into position. It is a good idea to start with the longest trim setting adjustment. (You can always go back and cut your mustache more closely with a shorter setting.)

ALWAYS TRIM YOUR MUSTACHE FROM THE TOP DOWN

4. After your mustache has been trimmed to the desired length, remove the 10-position comb and, using the blades only, define the outline of the bottom of your mustache.

5. Use the 8mm Switchcut™ detailing blade for fine detailing and hair art.

MEDIDAS DE SEGURIDAD IMPORTANTES

Siempre que use aparatos eléctricos, especialmente cuando se encuentren niños presentes, deben tomarse precauciones básicas de seguridad, entre las cuales las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DE USARLO

PELIGRO – Cualquier electrodoméstico tiene corriente incluso cuando está apagado.

Para reducir el riesgo de muerte o lesión por descarga:

1. DESCONECTE LA BASE INMEDIATAMENTE DESPUÉS DE USARLA (EXCEPTO CUANDO EL APARATO ESTÁ CARGANDO).

2. No coloque un cuerdo de extensión para operar el aparato.

3. No lo use en el baño o la ducha.

4. No coloque el aparato ni lo deje caer al agua o otro líquido.

5. Si la base cayera al agua, desconéctela inmediatamente. No toque el agua.

6. Desconecte la base antes de limpiarla.

ADVERTENCIA – Para reducir el riesgo de quemaduras, electrocución, incendio o lesiones:

1. Nunca deje el aparato desatendido mientras esté conectado.

2. Este aparato no debería ser usado por, sobre o cerca de niños o personas con alguna discapacidad.

3. Utilice este aparato únicamente con el propósito para el cual fue diseñado y solamente según las instrucciones. Sólo use accesorios recomendados por el fabricante. No utilice una extensión con este aparato.

4. No cambie la cuchilla durante el uso. Mantenga siempre un dedo para cambiar de cuchilla. La recordadora también está equipada con un botón turbo que ofrece un 15% más potencia para cortar pelo más grueso. Para usar la función turbo, simplemente deslice el botón hacia arriba y mantenga presionado el botón otra vez. La cuchilla de detalle se retirará la cuchilla de 30 mm, simplemente deslice el botón hacia abajo y la cuchilla de detalle se extenderá.

NO TRATE DE ALCANZAR LA UNIDAD EN EL AGUA

ADVERTENCIA – Para reducir el riesgo de quemaduras, electrocución, incendio o lesiones:

11. No lo utilice en exteriores, ni lo haga funcionar donde se usen productos aerosol (spray) o donde se esté administrando oxígeno.

12. PARA USO DOMÉSTICO SOLAMENTE.

GUARDE ESTAS INSTRUCCIONES

Se le hará más fácil mantener la cuchilla de afeitar encaja con el sistema de recorte SWITCHCUT™.

1. Asegúrese de que el aparato no esté conectado a un interruptor que controla la luz.

2. Asegúrese que el aparato esté posicionado en la base de carga de manera correcta y segura.

3. Asegúrese que el aparato esté posicionado en la base de carga, conecte la base a un tomacorriente y cargue el aparato durante 16 horas. Asegúrese que el botón de encendido/apagado esté en la posición de apagado ("OFF") y que el aparato esté apagado.

INSTRUCCIONES DE OPERACIÓN

1. Antes de usar el aparato por primera vez, colóquelo en la base de carga, conecte la base a un tomacorriente y cargue durante 16 horas. Asegúrese que el botón de encendido/apagado esté en la posición de apagado ("OFF") y que el aparato esté apagado.

2. Siempre apague y desenchufe el aparato de la base. Manténgalo en la base cuando no use para evitar que se ensucie. No use demasiado aceite y no lubrique el aparato más de lo necesario. Este aparato no debe ser sumergido en ningún líquido. Después de usar el aparato, limpie el exceso de aceite y aparte el aparato y el aceite lubricante en la base. Mantenga el aparato y el aceite lubricante lejos de los niños.

LIMPIEZA DE LAS CUCHILLAS

Las cuchillas tienen dientes de precisión para un uso específico, y deberán recibir un cuidado muy especial. Limpie las cuchillas después de cada uso con el cepillo de limpieza provisto, luego regrese el aparato en la base para guardar las cuchillas sea cuando sea necesario. Para ajustar las cuchillas o separar las cuchillas, haga esto con sumo cuidado; siempre estén cambiadas o afiladas al mismo tiempo.

IMPORTANTE: Antes de deslizar el botón hacia abajo para cambiar la cuchilla de afeitar, asegúrese que la unidad esté apagada y que no haya pelo-guía encima de la cuchilla. Afeite la cuchillas del rostro antes de hacer esto.

RESOLUCIÓN DE PROBLEMAS

Si su aparato no se carga, siga los pasos siguientes antes de contactar a un centro de servicio:

1. Asegúrese que el tomacorriente esté funcionando. Conecte dentro de un aparato conocido para asegurarse que el tomacorriente esté funcionando.

2. Asegúrese que el aparato esté conectado a un interruptor que controla la luz.

3. Asegúrese que el aparato esté posicionado en la base de carga de manera correcta y segura.

4. Asegúrese que el botón Turbo no esté presionado.

TECNOLOGÍA SWITCHCUT™ FÁCIL DE USAR

La recordadora SWITCHCUT™ emplea la tecnología SWITCHCUT™, con patente en trámite. Esta tecnología permite cambiar de cuchilla rápidamente con botón. Cuando termine de utilizar la cuchilla para barba y bigote de 30 mm, apague el aparato y deslice el botón. Se retirará la cuchilla de 30 mm y saldrá la cuchilla de detalle de 8 mm. Para volver a usar la cuchilla de 30 mm, simplemente deslice el botón otra vez. La cuchilla de detalle se retirará y la cuchilla para barba y bigote saldrá.

FUNCIÓN TURBO

Su recordadora está dotada de un botón Turbo. La función turbo ofrece un 15% más fuerza, lo cual facilita el cortado del pelo espeso o grueso.

Para activar la función Turbo:

1. Encienda el aparato ("ON").

2. Oprima el botón Turbo.

3. Siga oprimiendo el botón Turbo mientras necesite esta fuerza.

4. Afloje el botón Turbo para regresar al poder normal.

BOTÓN REGULADOR DE CORTE CON 3 POSICIONES

Su recordadora está equipada con un botón que permite ajustar la largo del corte a barba. El botón está ubicado en la parte trasera del aparato. El botón está ubicado en el lado izquierdo del aparato.

Para lograr resultados óptimos, humedezca ligeramente su barba y su bigote antes de recortarlos (no los moje). Esto evitará cortar demasiado pelo.

Para ajustar el largo de corte, deslice el botón de ajuste permite cortar cortar el pelo más corto o más largo, sin necesidad de usar un peine-guía. Para un corte más corto, empuje el botón hacia el nivel 3. Esto le dará la apariencia de una barba de 2 días. Para un corte más largo, empuje el botón hasta el nivel 2 o 1. Su cortadora puede perder velocidad si retortes de pelo están trabados en las cuchillas. Para limpiar las cuchillas sin separlas, utilice el cepillo de limpieza provisto. **Importante:** El cuidado del aceite lubricante es esencial para el correcto funcionamiento de la cuchilla para barba y bigote.

EL RECORTE

1. Su cordadora incluye un peine-guía de 10 posiciones para uso con la cuchilla para barba y bigote, y que corta el pelo de 2 mm a 6,5 mm.

2. Instale la guía para la barba de la cuchilla para la barba y bigote. Le recomendamos que utilice la cuchilla para la barba (siempre podrá volver a acortar la barba). Para cambiar el ajuste, gire la guía para alinearla con la marca de la cuchilla para la barba y bigote.

3. Empiece a cortar su barba con movimientos parejos y suaves, desde las patillas hasta la quijada. Nunca corte en la dirección opuesta al crecimiento natural del pelo. El recorte resultará demasiado corto.

4. Afeite la guía de 10 posiciones sobre el largo de corte deseado. Para cambiar la guía para barba y bigote, gire la guía hacia la izquierda. Para quitar la guía, jálela para afuera.

CÓMO CORTAR SU BIGOTE

1. Se le hará más fácil cortar su bigote si está limpio y ligeramente humedecido.

2. Peine su bigote en la dirección natural del pelo.

3. Instale la guía de 10 posiciones sobre la cuchillas. Empiece con la posición más larga (siempre podrá volver a acortar el bigote).

4. Despúes de terminar, saque la guía de la forma a la parte inferior de su bigote.

5. Utilice la cuchilla de detalle de 8 mm para cortes más precisos.

IGUALAR LA QUIJADA

1. Las guías para la quijada le permitirán lograr un recorte rato y preciso. Enserte la guía deseada sobre la cuchilla para barba y bigote, hasta que encaje.

2. Mantenga la cortadora recta y corte el pelo con pequeños movimientos parejos.

3. Despúes de terminar, saque la guía, jalando la pata.

CÓMO CORTAR SU BARBA

1. Se le hará más fácil el cortmono y el recorte si su barba está limpia y ligeramente humedecida.

2. La forma del cretimiento natural de su barba y bigote.

3. El espesor de su barba o de su bigote o de su bigote.

Si no está seguro de tipo de barba o bigote de la conviene, pida consejo a un barbero. Despúes de dar forma a su barba o a su bigote, debrá mantener su aspecto, usando la recortadora una vez por semana.

BARBAS Y BIGOTES

El tipo de barba o de bigote que más conviene a su rostro depende de:

1. La forma y la tamaño de su rostro.

2. La forma del cretimiento natural de su barba o de su bigote.

3. Siga oprimiendo el botón Turbo mientras necesite esta fuerza.

TIPOS DE BARBAS Y BIGOTES

1 = 2.0mm	6 = 4.5mm
2 = 2.5mm	7 = 5.0mm
3 = 3.0mm	8 = 5.5mm
4 = 3.5mm	9 = 6.0mm
5 = 4.0mm	10 = 6.5mm

SWITCHcut

SISTEMA DE RECORTE DE 12 PIEZAS

Manual de Instrucciones

Para su seguridad y para disfrutar plenamente de este aparato, siempre lea las instrucciones cuidadosamente antes de usarlo.

CONAIR

Modelo GMT400

TO TRIM YOUR GOATEE AND OTHER PRECISION TRIMMING

For precision trimming of tight areas, you will need to use the 8mm detailing blade.

1. Remove any guide comb that may be attached to the trimmer.
2. With the power on or off, simply slide the top button forward to change from the main trimmer blade to the 8mm detailing blade. This easy motion disengages the trimmer blade and activates the detailing blade.
3. Trim goatee or any other tight areas.
4. When precision trimming is completed, slide the button back and the detailing blade will return to the main trimmer blade.
5. The trimmer blade is now ready to use again.

SHAVING FOIL

Your trimmer includes a shaving foil. When attached, it will allow you to shave close and around facial hair to provide an extra clean look. Just move the shaving head in an up and down gentle stroke to remove any stray hairs. Be sure not to press to hard, as that could cause some skin irritation.

After each use clean the shaving head as follows:

1. Make sure the appliance off.
2. Remove the shaver head from the unit.
3. Remove the foil head from the shaving head (press the two buttons on either side of the shaving head and pull the foil head away).
4. Use the cleaning brush to gently remove any hairs from the cutter and shaving head.

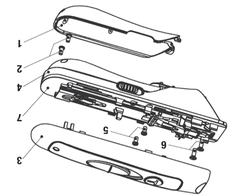

BATTERY REMOVAL

CONAIR
RECICLE
RECYCLE
CONTIENE UNA PILA DE NÍQUEL E HIERRO METÁLICO. LA CUAL DEBE SER RECICLADA. RECÍCLELA O DESÉCHELA CORRECTAMENTE. NO TIRE LA PILA CON EL RESTO DE BASURA.
CONTAINS NICKEL METAL HYDRIDE BATTERY. MUST BE RECYCLED OR DISPOSED OF PROPERLY. DO NOT DISPOSE OF IN THE MUNICIPAL WASTE.

1. Pop-off decorative plate on bottom housing (**1**).
2. Using a small Phillips head screwdriver, remove the two screws (**2**) at the back of the trimmer.
3. Take the top housing (**3**) off the bottom housing (**4**).
4. Remove the 4 screws (**5 and 6**) in the battery cover (**7**). Bring the batteries to the nearest collection center for proper disposal. DO NOT throw the battery into the normal municipal waste system.

ON/OFF SWITCH

To operate, simply slide switch toward blade, to stop push slide away from blade.

CARE OF YOUR TRIMMER

REPLACEMENT (REMOVAL) OF BLADE SET

To remove blade set from your trimmer, make sure the trimmer is in the OFF position. Remove the blade set by placing thumb against the smaller cutter and pushing forward, releasing the cutter assembly from the trimmer housing. Replace with attachment and reverse the removal procedure, only this time place your thumb on the large cutter and snap into place. Make sure the taper control is set to the longest #1 position.

GMT400 SWITCHCUT™ TRIMMER

LIMITED TWO YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed below, together with your purchase receipt and $3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-366-0937 for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion of limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

© 2008 Conair Corporation

Service Center
Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

08NG029

IB-8401A

1. Solid Steel Hair Trimming Blade
2. Fine Detailing & Nose/Ear Hair Blade
3. Shaving Foil
4. Drawstring Accessory Pouch
5. 10-position Adjustable Comb
6. Lubricating Oil
7. Cleaning Brush
8. Mustache Comb
9. 3 Jawline Combs
10. AC Adapter
11. Charging/Storage Stand

CHGSTAND-400

3JAW-400

10POS-400

SHEAD-400

BLD-400

CUT HERE

TRIMMER REPLACEMENT PARTS & ACCESSORIES ORDER FORM

Pricing in effect through June 1, 2009. Orders postmarked after this date will be accepted, and the customer will be notified if pricing has changed.

ITEM	PART #	PRICE	QUANTITY	AMOUNT
Trimmer Attachment Blade	BLD-400	$6.50		
10-position Attachment Comb	10POS-400	$3.00		
Shaver Head	SHEAD-400	$6.50		
3 Jawline Combs	3JAW-400	$5.50		
Charging Stand	CHGSTAND-400	$5.50		

Subtotal

*Sales Tax

TOTAL

Enclose check or money order made payable to Conair. (We cannot accept cash, stamps or C.O.D. orders.) CT, IL, AZ and PA residents should add applicable state sales tax. Minimum order of $10.00 or a $2.00 handling charge will be added to order.

All prices include handling and return postage. Prices are subject to change without notice. Prices are valid only for shipments within the Continental United States. **Please allow 4-6 weeks for delivery.**

To avoid delays, please print clearly.

We must have a street address, as UPS cannot deliver to a P.O. box.

NAME _____

ADDRESS _____ APT. _____

CITY _____ STATE _____ ZIP _____

TELEPHONE ( ) _____ (We call only if we have a question about your order.)

For information on other Conair® brand parts call: 1-800-3-CONAIR.

Mail to:
Conair Corporation
Service Department
150 Milford Road
East Windsor, NJ 08520-9730

Instruction & Styling Guide

For your safety and continued enjoyment of this product, always read the instruction booklet carefully before using.

SWITCHcut

12 PC. FACIAL GROOMING SYSTEM

CONAIR

Model GMT400

PERILLA Y OTROS CORTES DE DETALLE

Utilice la cuchilla de detalle de 8 mm para todos los cortes que requieren precisión, como la perilla y otros cortes de detalle.

1. Apague la recortadora (OFF) y saque el peine-guía de la cuchilla para barba y bigote si tiene uno puesto.
2. Deslice el botón SWITCHUT™ para retraer la cuchilla para barba y bigote. La cuchilla de detalle de 8 mm saldrá automáticamente.
3. Corte el pelo en las zonas deseadas.
4. Deslice el botón otra vez para retraer la cuchilla de detalle.
5. Puede seguir usando la cuchilla para barba y bigote si desea.

CÓMO USAR LA RASURADORA

Su sistema de recorte también incluye un cabezal de rasuradora que se adapta sobre la recortadora para proporcionar un afeitado al ras extra limpio. Mueva la rasuradora lentamente, sin apretar mucho.

Limpie la rasuradora después de cada uso:

1. Asegúrese que el aparato esté apagado (“OFF”).
2. Saque el cabezal de rasuradora.
3. Oprima los botones en ambos lados del cabezal para sacar la hoja.
4. Limpie la hoja y el cabezal con el cepillo de limpieza provisto.

BOTÓN DE ENCENDIDO/APAGADO

Para encender el aparato, deslice el botón de encendido/apagado hacia arriba (“ON”). Para apagar el aparato, deslice el botón de encendido/apagado hacia abajo (“OFF”).

MANTENIMIENTO

CAMBIO DEL JUEGO DE CUCHILLAS

Para sacar el juego de cuchillas: Apague el aparato (OFF). Sostenga el aparato con el botón de encendido/apagado frente su cuerpo y empuje la cuchilla pequeña con el pulgar.

Para instalar el juego de cuchillas: Asegúrese que el botón de ajuste del recorte esté en la posición más larga (no.1). Ensarte el juego de cuchilla sobre el cabezal de la recortadora y empuje la cuchilla grande para encajarlo.

INSTRUCCIONES DE REMOCIÓN DE LA PILA

RECICLE
RECYCLE
ESTE APARATO CONTIENE UNA PILA DE NÍQUEL E HIERRO METÁLICO. LA CUAL DEBE SER RECICLADA. RECÍCLELA O DESÉCHELA CORRECTAMENTE. NO TIRE LA PILA CON EL RESTO DE BASURA.

1. Saque la placa decorativa **(1)** que se encuentra bajo la unidad.
2. Remueva los tornillos ubicados en la parte trasera de la unidad **(2)**, usando un destornillador cruciforme pequeño.
3. Separe la parte superior **(3)** de la parte inferior **(4)** de la unidad.
4. Remueva los 4 tornillos **(5)** de la cubierta del compartimiento de la pila. Lleve la pila al centro de reciclaje o de recogida de pilas más cercano. NO la tire a la basura.

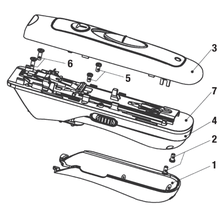

GMT400 SISTEMA DE RECORTE SWITCHUT™

1. **Cuchilla para barba y bigote de acero inoxidable**
2. **Cuchilla de detalle & nariz/oídos**
3. **Rasuradora**
4. **Estuche**
5. **Guía ajustable con 10 posiciones**
6. **Aceite lubricante**
7. **Cepillo de limpieza**
8. **Peine para el bigote**
9. **3 guías para la quijada**
10. **Adaptador de C.A.**
11. **Base de carga**

GARANTÍA LIMITADA DE DOS AÑOS

Conair reparará o remplazará (a su opción) su aparato sin cargo por un período de 24 meses a partir de la fecha de compra si presentara defectos de materiales o fabricación.

Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio indicado a continuación, junto con su recibo de compra y un cheque o giro postal de $3.00US por gastos de manejo y envío. Los residentes de California sólo necesitan dar una prueba de compra y deben llamar al 1-800-366-0937 para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 24 meses a partir de la fecha de fabricación.

CUALQUIERA GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 24 MESES DE LA PRESENTE GARANTÍA ESCRITA. Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE EN NINGÚN CASO POR ALGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA. Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

© 2008 Conair Corporation

Centro de Servicio
Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

08NG029

IB-8401A

BLD-400

SHEAD-400

10POS-400



3JAW-400

CHGSTAND-400

CORTE AQUÍ

FORMULARIO DE PEDIDO PARA PARTES DE REPUESTO Y ACCESORIOS

Precios válidos hasta el 1ero de junio del 2009. Aceptaremos los pedidos después de esa fecha y notificaremos los clientes si los precios han cambiado.

ITEM	PART #	PRICE	QUANTITY	AMOUNT
Cuchilla para barba y bigote	BLD-400	$6.50		
Peine-guía con 10 posiciones	10POS-400	$3.00		
Rasuradora	SHEAD-400	$6.50		
3 Guías para la quijada	3JAW-400	$5.50		
Base de carga	CHGSTAND-400	$5.50		

Subtotal

Impuestos a la venta*

TOTAL

Incluya un cheque o giro postal a la orden de Conair (no podemos aceptar dinero en efectivo, estampillas, ni pedidos con pago con entrega). Los residentes de CT, IL, AZ y PA deben sumar al subtotal el impuesto estatal a las ventas que corresponda. Pedido mínimo de $10,00US o de lo contrario se sumará al pedido $2,00US por gastos administrativos.

Todos los precios incluyen gastos administrativos y franqueo de envío. Los precios están sujetos a cambio sin previo aviso. *Estos precios son válidos únicamente para los envíos en la parte continental de los Estados Unidos.* ***La entrega demora entre 4 y 6 semanas.***

Enviar a:
Conair Corporation
Service Department
150 Milford Road
East Windsor, NJ 08520-9730

Para evitar demoras, por favor escriba claramente.

Necesitamos una dirección completa ya que UPS no puede hacer entregas en casillas postales.

NOMBRE _____

DIRECCIÓN _____ APTO. _____

CIUDAD _____ ESTADO _____ CÓDIGO POSTAL _____

TELÉFONO ( ) _____ *(sólo le llamaremos si tengamos alguna pregunta sobre su pedido)*

Para información sobre otras partes de los conjuntos de Conair®, llame al 1-800-3-CONAIR